


INSTALLATION INSTRUCTIONS

Make Ø80mm cut-out. Ensure that there is a sufficient clearance, 150mm below surface and 30 mm between the cut-out edge and the edge of the work surface.

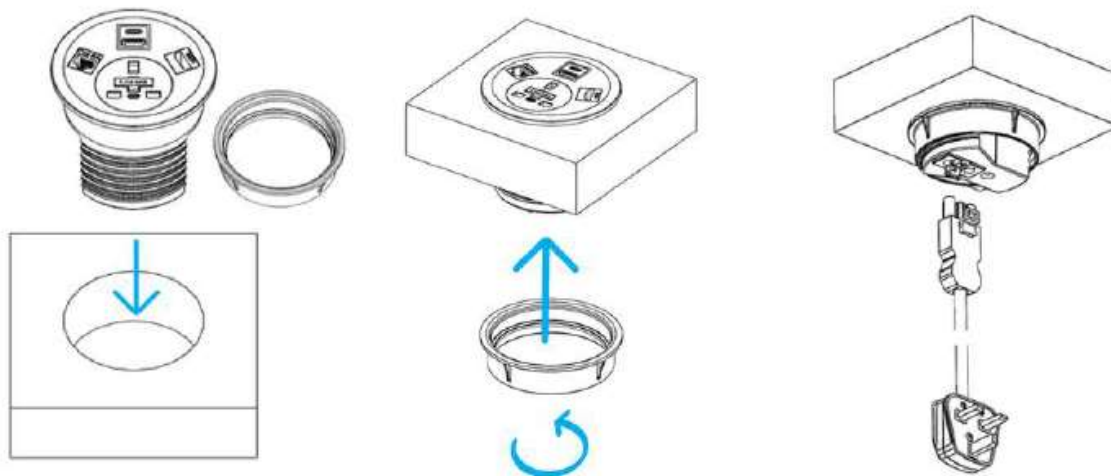

1. Remove the locking ring and place the module in the desk cut-out
2. Whilst twisting the locking ring, set up module orientation
2. Connect the mains lead with the 3 Pole Connector

DIMENSIONS

